

---

## **90851**

# **97-01 Jeep Cherokee Adventure Doors**

## **INSTALLATION INSTRUCTIONS**


**KIT CONTENTS:** Kit Includes Driver door, Passenger Door, paddle handles, and mounting hardware

### **PHASE 1: DOOR REMOVAL**

1. The first step to removing the doors involves disconnecting the wiring. Remove the plastic kick panels and unplug the wire bundle coming in from the door. Pull the grommets loose from the door jamb and slide the wiring out of the hole.
2. Remove the pins from your doors limiting rods. A simple tap with a small punch and hammer should free them easily.
3. Unbolt your doors by removing the (6) size 40 TORX head bolts attaching them to the hinges. Note the locations of any shims on the doors as you will want to put them back on the same way during re-installation. You will likely need someone to assist you in holding the door steady as you remove the final bolts as the process can be a bit cumbersome.

### **PHASE 2: DOOR ASSEMBLY**

1. Four small screws with nylock nuts will hold your paddle handles into your door. Identify each door and their corresponding paddle handle and assemble them with the screw heads facing outside. The paddle handle mechanism is to be inserted through the door plate from the outside of the door and the striker slot in the paddle handle mechanism should be angled down.

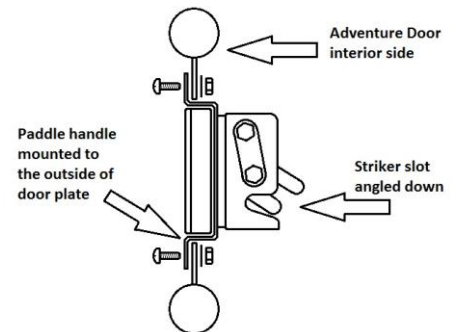

**Paddle Handle Assembly Orientation**

### **PHASE 3: DOOR INSTALLATION**

1. Use the supplied 3/8" stainless hardware to install the doors onto the hinges. Make sure you are sliding the bolts thru the doorjamb side of the hinge and the nuts on the door side. This ensures that the bolt ends and hex nuts do not interfere with the doorjamb when you're trying to close the door. The button head bolts utilized here make sure there is enough room for them to clear between the hinge and the doorjamb.
2. Once bolted in and tightened, check alignment and adjust if necessary. Your installation is now complete.

