



Protecting Your Adventure Lifestyle

Warrior Products, Inc.  
11100 SW Industrial Way  
Tualatin, OR 97062  
Phone (888) 220-6861  
Fax (503) 692-0364  
customerservice@warriorproducts.com


---

---

## ALUMINUM HALF DOORS INSTALLATION INSTRUCTIONS 905DOOR CJ5 1976 to 1985

Read all instructions before proceeding

1. Assemble door paddle handles into their respective sides with hardware provided. Insert the latching mechanism in through from the front side and with the mechanism towards the back of the Jeep. The pivoting striker latch must be in the down orientation.
2. Apply the foam moulding to the lower inside edge of each door. (See Diagram 'A')
3. The 905DOOR uses the factory hinges. At this time, place the half door into the factory hinges.
4. Assemble the striker bracket and place on top of the body tub rail so that the paddle handles' latch engages the striker pin. Make any vertical adjustments to the pin so that the bracket lies flat on the body tub rail. Mark the mounting locations through the bracket, set the bracket aside and drill the 3/8" holes. Mount the bracket on the tub rail making certain the alignment is correct. The door should open and close smoothly if properly installed.

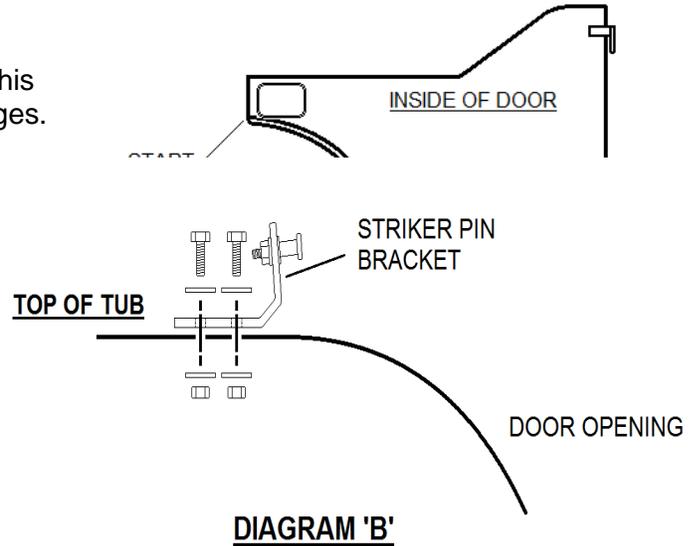

### THANK YOU FOR PURCHASING WARRIOR PRODUCTS

If you need further assistance installing your product, please contact us by email at [customerservice@warriorproducts.com](mailto:customerservice@warriorproducts.com) or call us at (888) 220-6861.