


1971 – 1986 JEEP CJ5 / CJ7 / CJ8 STEERING BOX BRACE

P/N: 895/897

INSTALLATION INSTRUCTIONS

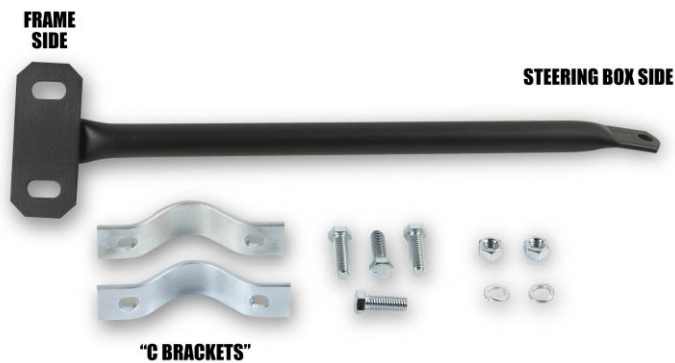

IMPORTANT NOTE: OEM POWER STEERING BOX ONLY

INSTALLATION:

1. Remove the rear bolt from the spring hanger on the passenger side.
2. Bolt the cross bar steering brace to the frame rail with the bolts provided. Use one of the 1 ½" bolts through the existing frame bracket, (bolt, lock washer, and flat washer). Use one of the 1 ¼" bolts through the frame's existing hole, (bolt, lock washer, and flat washer). Do not tighten at this time.
3. Install "C" brackets around the bottom of the steering bracket using the bolts and lock nuts provided. Make sure the Pitman Arm has clearance to turn without interference from the bracket.
4. Torque bolts on the frame first to 50ft lbs. Torque bolts around the steering box to 50ft lbs.
5. After a test drive, verify that all of the bolts are tight.

If you need further assistance installing your product, please contact us by email at customerservice@warriorproducts.com or call us at (888) 220-6861.

THANK YOU FOR PURCHASING WARRIOR PRODUCTS