

JEEP WRANGLER JL/JLU & GLADIATOR JT CENTER COWL COVER

INSTALLATION INSTRUCTIONS

PN: 6920 / 6920PC / S6920

WHAT'S INCLUDED:

- (1) Cowl Cover
- (12) 3/16" pop rivets

TOOLS NEEDED:

- Jeep toolkit (included with vehicle)
 - M15 socket
 - Ratchet
- Flathead screwdriver/putty knife
- Drill and 3/16" drill bit
- Rivet gun



REMOVING WINDSHIELD WIPERS AND FACTORY COWL COVER

1. Uncover windshield wiper retaining nuts by prying plastic cap away from base with flathead screwdriver or putty knife.
2. Using the M15 socket and ratchet remove the nut from wiper bolt.
3. Remove wiper by pulling up and away from windshield.



- Note: it may require lifting wiper arm and tilting back and forth to loosen.
- Remember location of wipers on windshield to help with reinstallation.

4. There are 12 clips holding the cowl cover and cowl together. To remove factory cowl cover, pry up the edge using the flathead screwdriver or putty knife
5. Once the first clip is detached, gently lift cowl to unhook the remaining clips.

Use screwdriver or putty knife to pry up cowl cover

Use a rag or towel to protect hood




INSTALLING NEW WARRIOR PRODUCTS COWL COVER


- Rivet holes are already drilled out in cowl cover. You will need to drill holes in windshield cowl for installation of rivets.

DRILLING HOLES FOR 3/16" RIVETS


1. Place the new cowl cover where factory cowl cover used to sit. See photo for orientation.

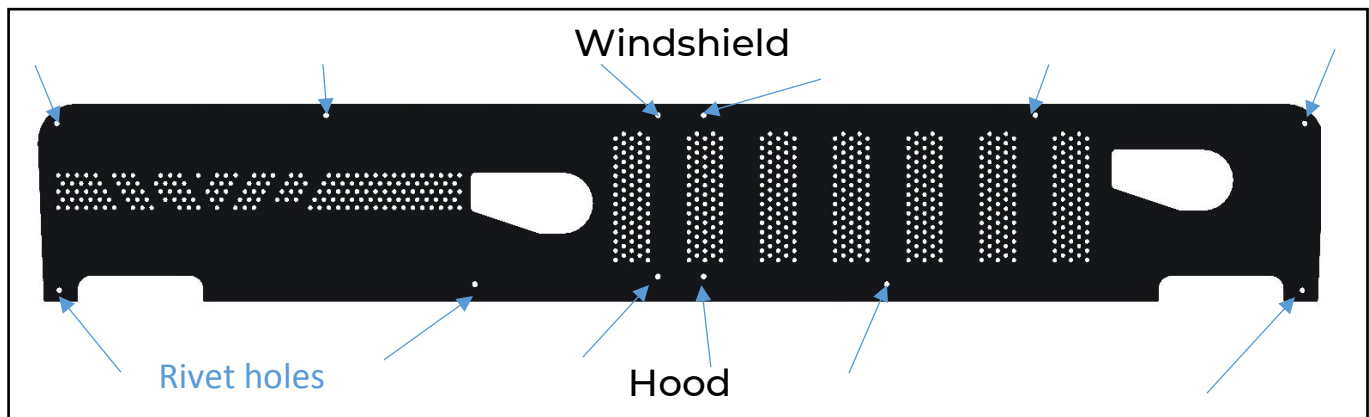

2. Make sure edge of cowl cover lines up with edge of cowl on both sides
3. With 3/16" bit and drill, drill through holes in cowl cover and into plastic cowl underneath.
 - Optional: use marker to mark hole locations, remove cowl cover and drill at marks.

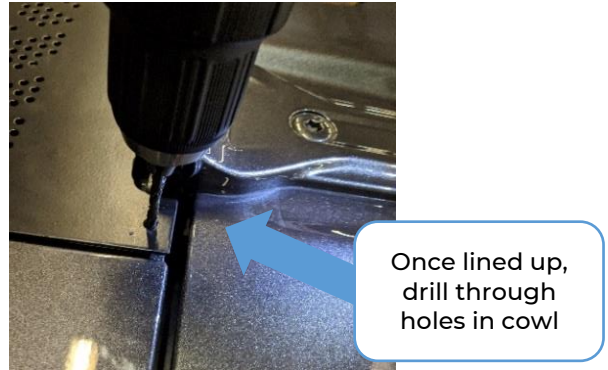

4. With a rivet gun install the 12 provided 3/16" rivets in drilled out holes. It is recommended to attach rivets by starting from one end and then working down in a line to the other end. This will prevent warping.
 - However, to ensure proper hole alignment, rivets, may be installed at outer edges first, and then from end to end.

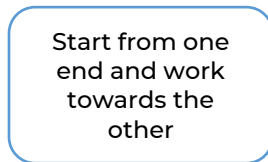

REINSTALLING WINDSHIELD WIPERS

1. Place wiper base into wiper bolts. Make sure wipers are in same position on the windshield as when removed. Again, it may require tilting back and forth to get wiper base to seat correctly.
2. Reinstall retaining nut and plastic bolt cap.

THANK YOU FOR PURCHASING WARRIOR PRODUCTS

If you need further assistance installing your product, please contact us by email at customerservice@warriorproducts.com or call us at (888) 220-6861.