



Warrior Products, Inc.
 11100 SW Industrial Way
 Tualatin, OR 97062
 Phone: (888) 220-6861
 Fax: (503) 692-0364
customerservice@warriorproducts.com
www.warriorproducts.com

2005 – 2017 Toyota Tacoma Platform Roof Rack – Double Cab

P/N 4860

Kit Contents:

| Item | Qty | Item | Qty |
|----------------------|-----|------------------------------------|-----|
| 3/8" x 1" Hex Bolt | 8 | Platform Rack | 1 |
| 3/8" SAE Flat Washer | 16 | 6mm x 20mm Bolt | 8 |
| 3/8" Nyloc Nut | 8 | 1/4" Lock Washer (use w/ 6 MM) | 8 |
| Mounting Bracket | 2 | 1/4" USS Flat Washer (use w/ 6 MM) | 8 |

Installation Instructions:

1. If you have a factory roof rack, remove it to reveal the factory roof rack mounting points.
2. If you do not have a factory roof rack, remove ditch moldings by using a tape-wrapped flathead screwdriver or some other soft, flat edge. See **Figure 1**. This will reveal 10 well nuts (5 driver's side & 5 passenger's side).
3. Remove protective tape from the 2 front-most well nuts and 2 rear-most well nuts. Do this on both the driver's side and the passenger's side.
4. Use some RTV silicone sealant around each of the well nuts, to prevent rusting and water leaks.
5. Locate your mounting brackets. These will have tabs and a lip facing inwards with a stamped "WP" towards the rear of the vehicle.
6. Starting with the driver's side, position the mounting bracket and loosely attach to the 4 well nuts using the 6mm x 20mm bolts, 1/4" Lock Washers, and 1/4" USS Flat Washers.
7. Tighten bolts (torque is approx. 8 ft-lbs). Repeat step 6 for the passenger side.
8. Place the platform on mounts with the angled platform tube facing forward. It helps to have a spare set of hands for this step.
9. Loosely start [4] 3/8" x 1" bolts, [8] washers, and [4] Nyloc Nuts. The bolts should be placed in through the center row of slots(Front-to-Rear), and in the two inner-most slots (Side-to-Side). See **Figure 2**. ****To clear the factory Sharkfin Antenna you may have to place the bolts in the Front row of slots (platform slid back).****
10. Repeat step 10 for opposite side.
11. Visually align platform and tighten all hardware.
12. Installation Complete.

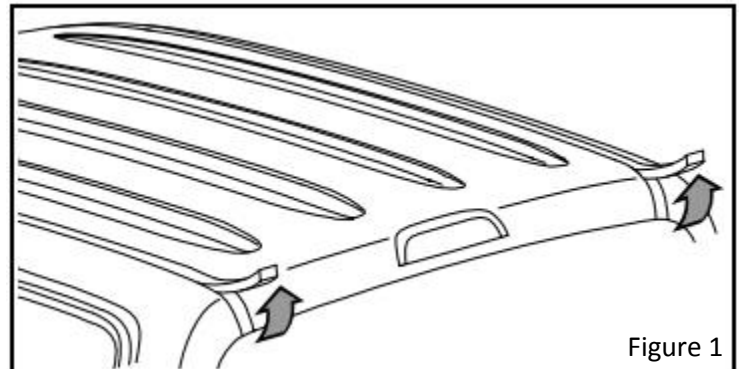


Figure 1

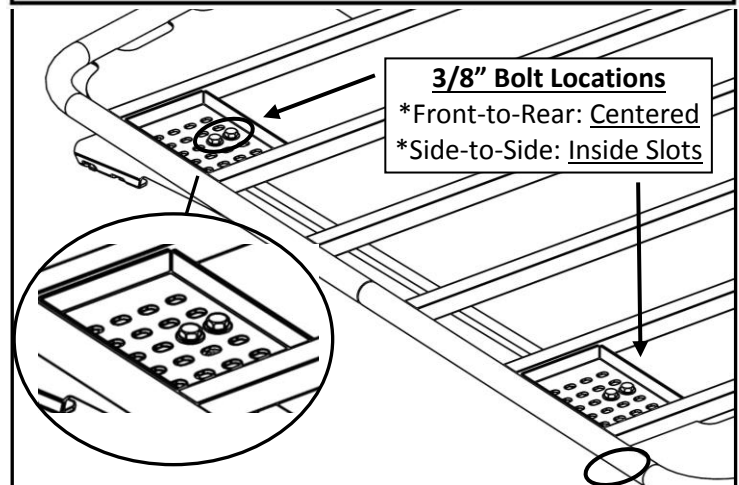


Figure 2



Warrior Products, Inc.
11100 SW Industrial Way
Tualatin, OR 97062
Phone: (888) 220-6861
Fax: (503) 692-0364
customerservice@warriorproducts.com
www.warriorproducts.com

If you need further assistance installing your product, please contact us by email at customerservice@warriorproducts.com or call us at (888) 220-6861.